


LINER REPLACEMENT

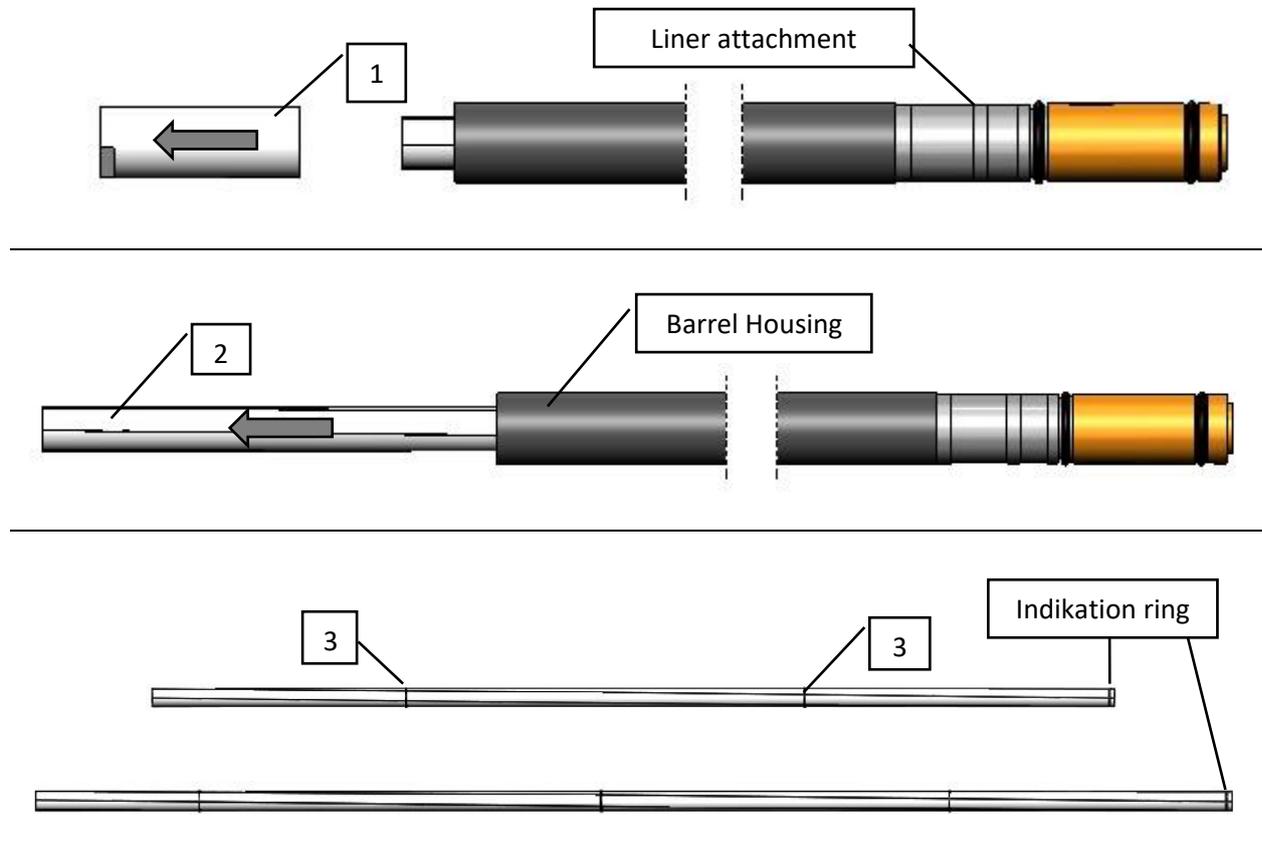

LINER REMOVAL

- Remove Barrel-shroud, *if it is on the barrel*
- Unscrew the Liner Lock **(1)**
- Pull out the Liner **(2)**

LINER INSTALLATION

- Put the O-rings **(3)** on the new Liner **(2)**, *two or three o-rings, depending on the Liner*
- Put a little grease on the O-rings and press the Liner into the Barrel Housing, with the indication ring pointing towards the liner attachment, until it stops
- Screw on the Liner lock **(1)** and tighten ~a quarter turn
- Mount on the Barrel-shroud, *if it was on the barrel*
- Test the Barrel